

CCS-200

Calibration Procedure

1. Purpose & Scope

This document will demonstrate the regularly required and preventative calibration maintenance procedure.

2. Application

Calibration of the unit is always performed before shipment. Sometimes during transit or after a long period of use, however, the calibration of the sensors might be altered. These conditions can lead to a higher rate of false rejects.

3. Definitions & Acronyms


Refer to CCS-200 User Manual for definitions.

4. Requirements

No tools required.

5. Procedure

1. Ensure the CCS-200 is connected to a power source but remains turned off.
2. Press and hold the DOWN ARROW button, then press the POWER button while still holding the DOWN ARROW button, until the calibration screen appears.

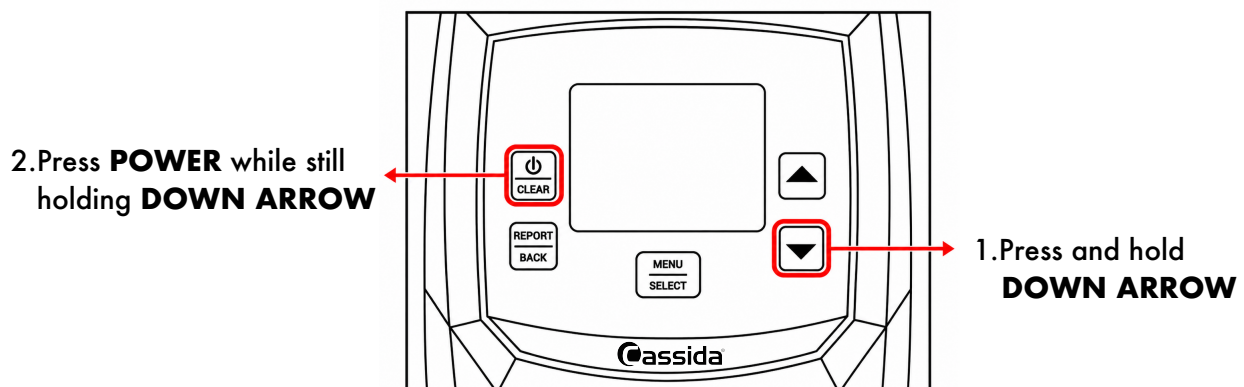


CCS-200


Calibration Procedure

3. Follow the instructions displayed at the bottom of the screen, by first moving the lid upwards slowly. The unit will then provide instructions to move the lid upwards and downwards until the lid is in a precise position.

Note: If you lift or lower the lid too quickly and pass that position, the unit will instruct you to lower or lift the lid again. It is helpful to move the lid in very small increments so that you minimize the number of lift-lower cycles. It is possible, if done carefully, to complete this step in one upward or downward movement.

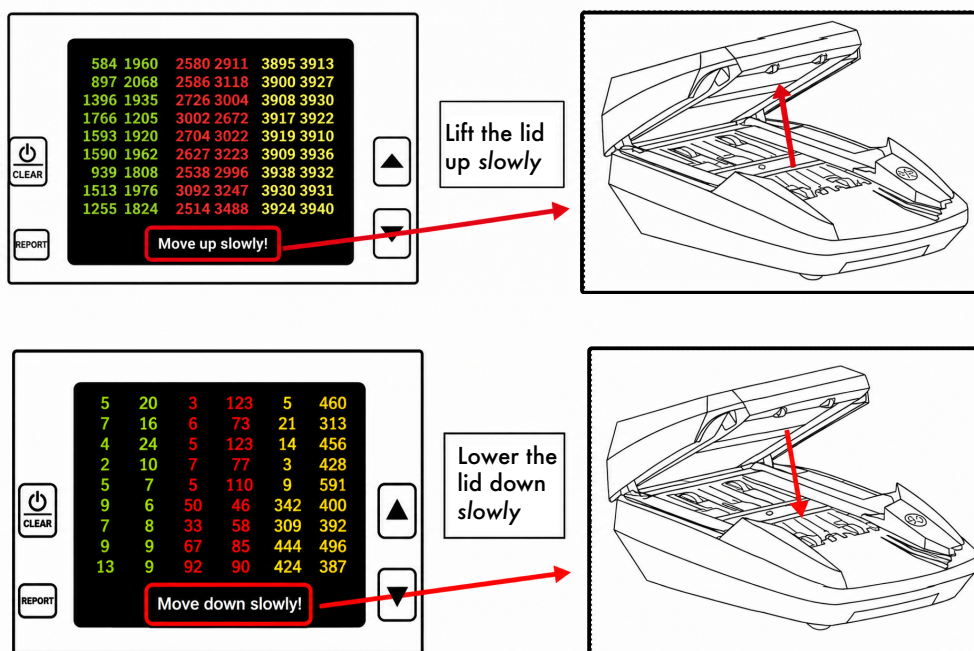


4. Once the calibration is completed, you will be prompted to Exit.

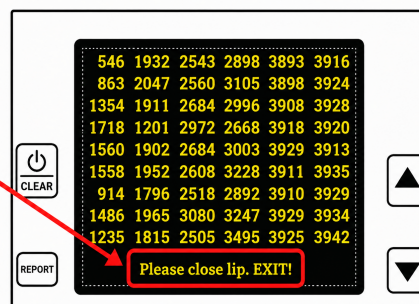

CCS-200

Calibration Procedure

5. Exit by pressing the BACK button and the unit will automatically restart with the new calibration.

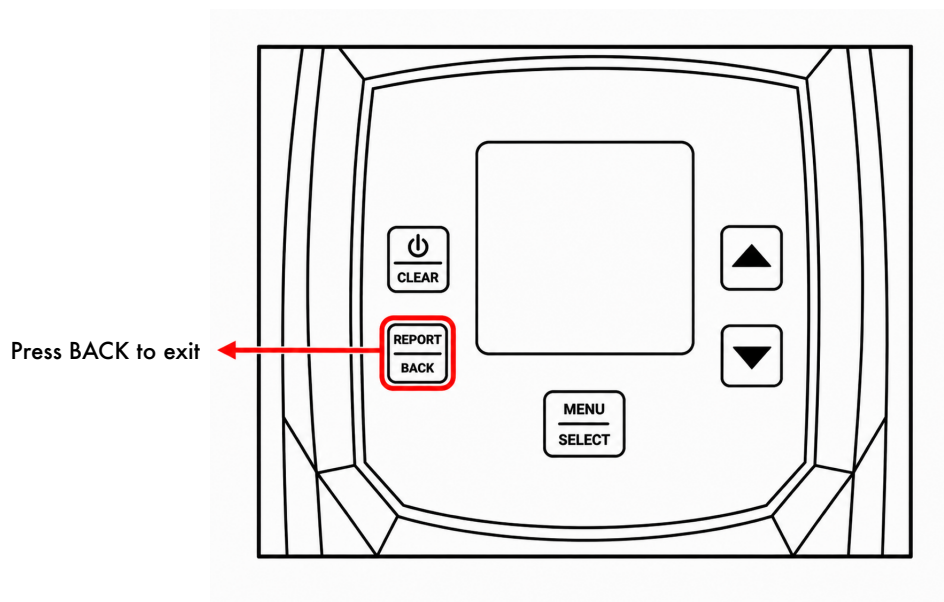

If, after using the recommended calibration method, this does not resolve the issue, please see the support section on Cassida USA website at www.Cassidausa.com, or contact Cassida Support at support@Cassidausa.com for further troubleshooting.