6600 MAX
External Printer Connection


Cassida 6600 MAX provides the option to display count report on the screen and print it if external printer is connected (printer not included).

Cassida 6600 MAX works best with the Cassida Thermal Printer (sold separately) and can be connected via RS232 printer cable (comes with the printer) to the machine.

The print function is available only when the value count mode is active. Follow the instructions in user manual section 3.9, “Report and Printing”.

To print the report, follow the steps:

1. Please locate RS232 cable that comes with the printer.

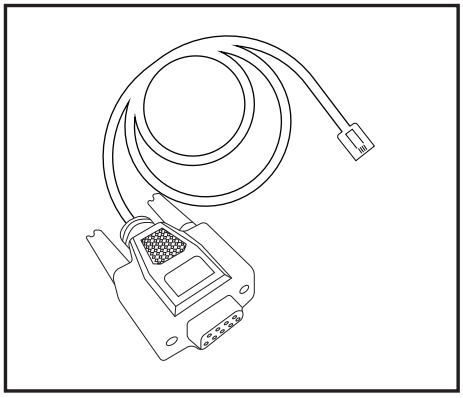


2. Connect the RS232 end of the cable that comes with the printer to the RS232 port at the back of the Cassida 6600 MAX.

3. Connect the other side of the cable to the printer.

©2026 Cassida Corporation. All rights reserved. Specifications subject to change without notice. Cassida is a registered trademark of the Cassida Corporation.
REV102326

Cassida®

6600 MAX
External Printer Connection

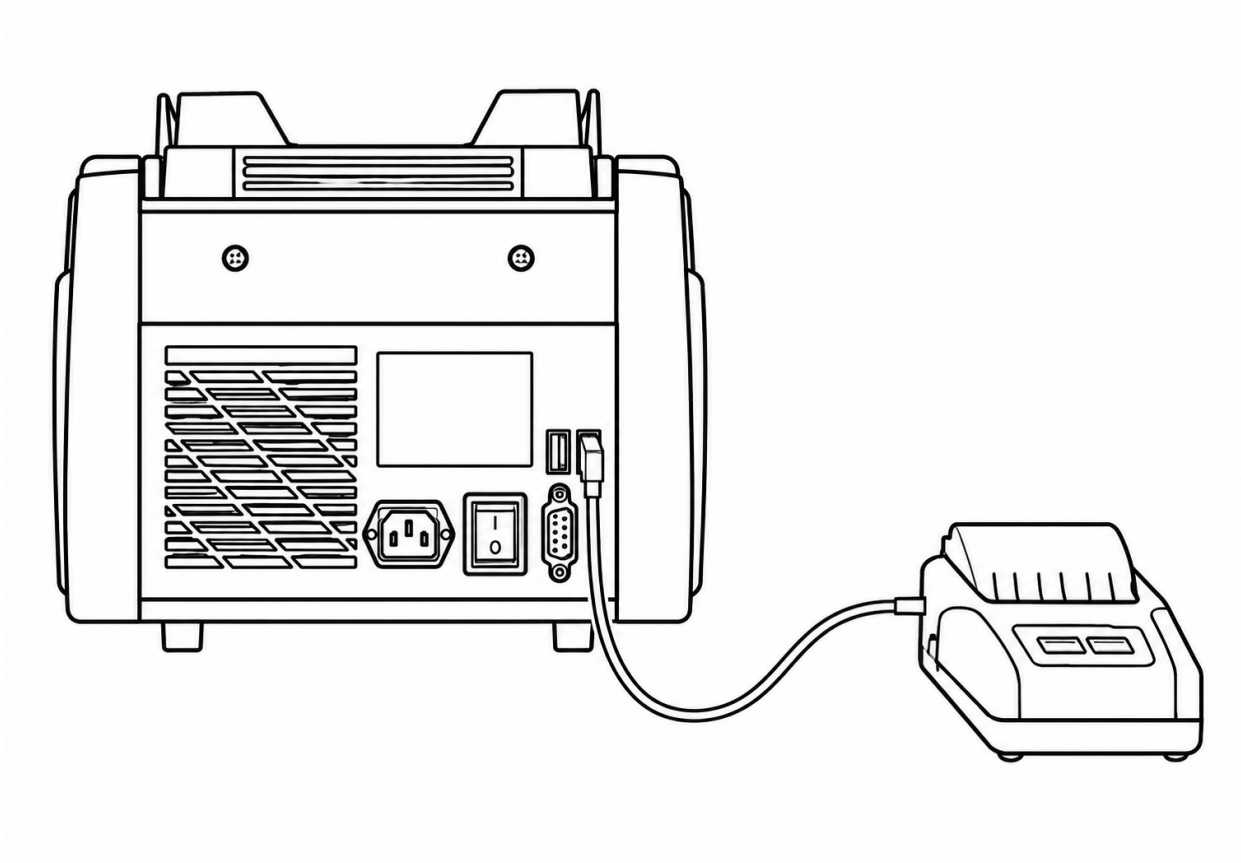

4. Press the PRINT button on the machine to print the report.

If you have any issues with the connectivity of the printer, please see the support section on Cassida USA website at www.Cassidausa.com, or contact Cassida Support at support@Cassidausa.com for further troubleshooting.

©2026 Cassida Corporation. All rights reserved. Specifications subject to change without notice. Cassida is a registered trademark of the Cassida Corporation.
REV102226