



CRS-1000 Cleaning Procedure

Dirty sensors can cause false errors such as Double (dbL) and Half (HLF) errors, and may decrease the performance of the Cassida CRS-1000. It is suggested that the user performs daily maintenance on the unit to maintain top performance.

The unit should always be turned off and disconnected from its power cord before cleaning. DO NOT use solvents such as thinner, alcohol, etc. to clean the machine.

Most operational problems can be avoided by regular care and preventative maintenance. Taking regular care of the Cassida CRS-1000 will significantly increase its lifetime.


For best results, it is recommended to use an air duster and a soft bristle brush to remove any dust or debris from the interior of the unit. When not using the machine for an extended period, cover it with the dust cover (included with the unit) to prevent dust from settling inside.

All parts of the Cassida CRS-1000 need daily care and cleaning. Pay close attention to the sensors, which are delicate components. If any dust or other foreign matter adheres to the sensors, it may cause various problems during operation of the machine.

- To avoid malfunction caused by foreign objects, please clean your machine frequently.
- Clean Hopper and Stacker sensors with provided soft bristle brush or a dry cloth frequently.
- Clean sensors with the provided soft bristle brush or dry cloth frequently.
- Rubber rollers may be cleaned with a slightly damp cloth. You may use a small amount of isopropyl alcohol to dampen the cloth and clean the rollers. Wait until the rollers are completely dry before turning on the machine.



CRS-1000 Cleaning Procedure

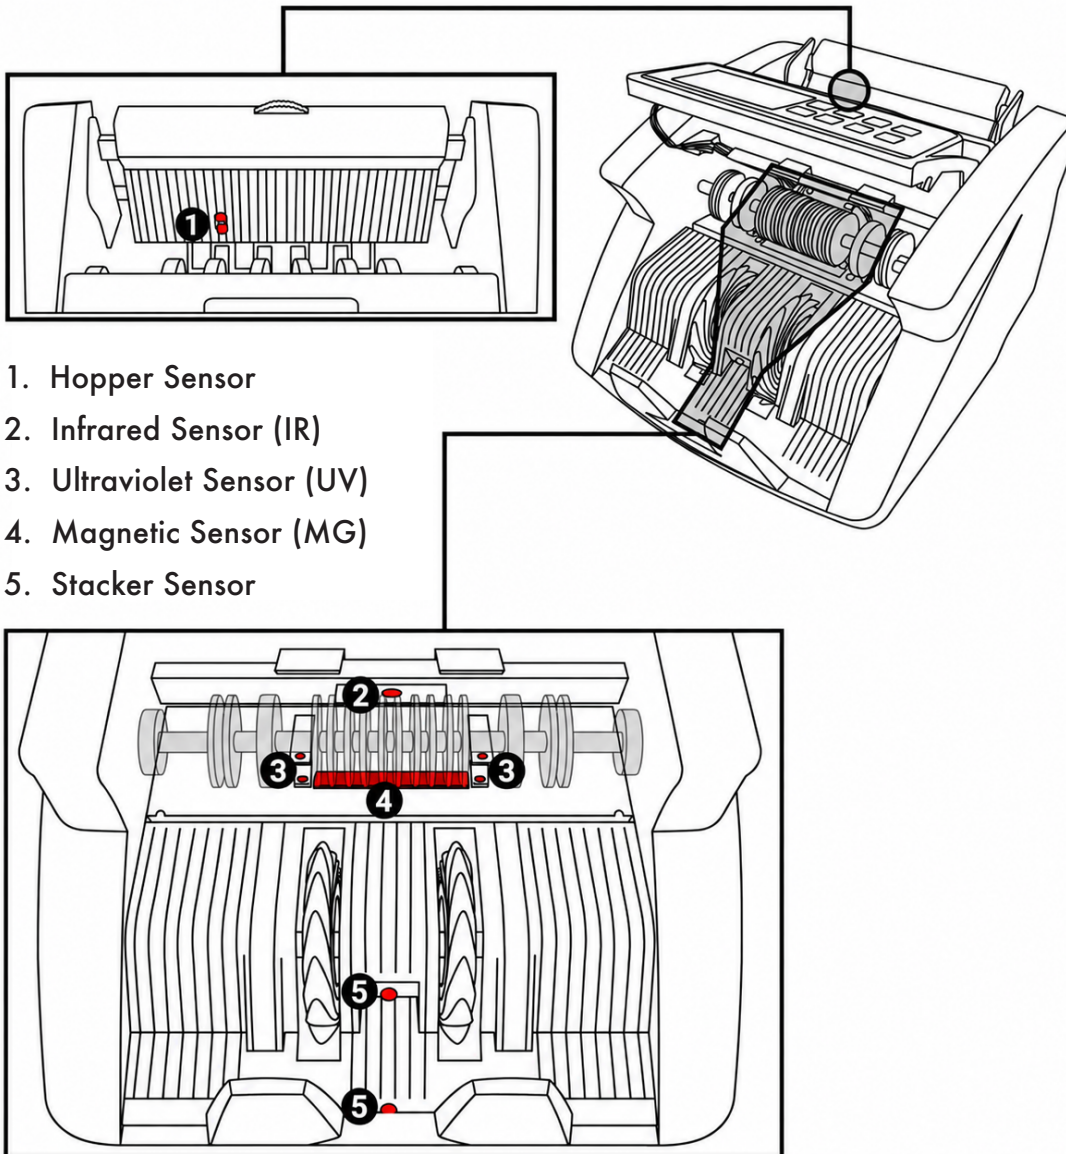


1. Hopper Sensor
2. Infrared Sensor (IR)
3. Ultraviolet Sensor (UV)
4. Magnetic Sensor (MG)
5. Stacker Sensor

Cassida suggests that the user cleans the unit at least once per week. For heavy use locations and operation. When the unit is not in use, Cassida suggests that the user covers the unit with a dust cover.


If, after cleaning all sensors, this does not resolve the issue, please see the support section on Cassida USA website at www.Cassidausa.com, or contact Cassida Support at support@Cassidausa.com for further troubleshooting.




CRS-1000 Cleaning Procedure

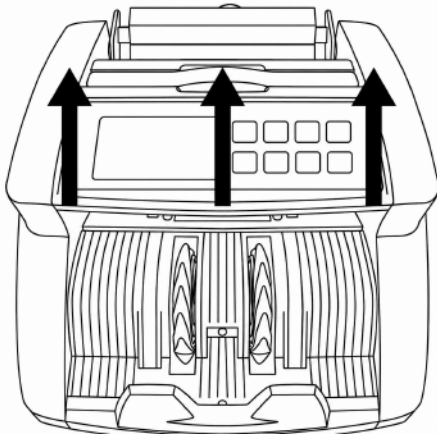

1. To open your unit place fingers under control panel and thumbs on the side panels. Firmly lift the control panel.

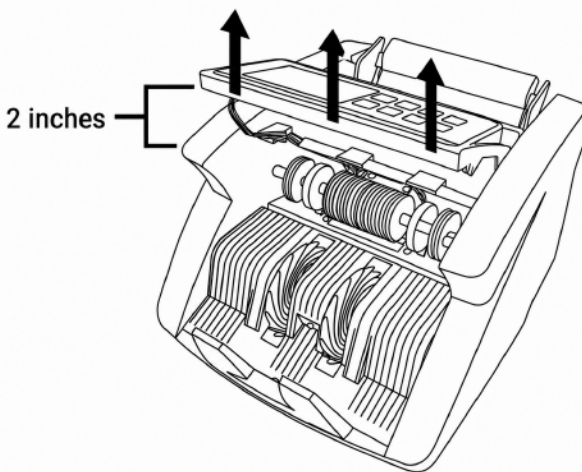

2. Carefully lift the control panel about 2 inches.

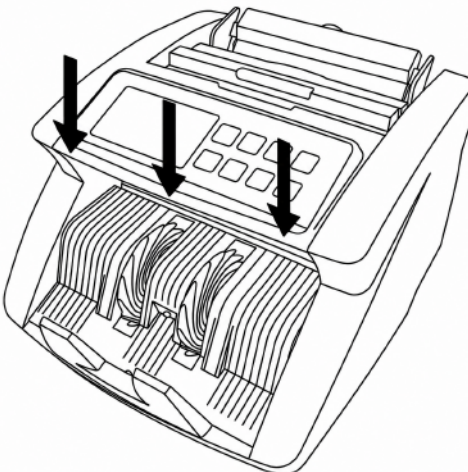

3. To close your unit secure the control panel back to the initial position. Firmly press down on the control panel until it snaps back into place.